


Iron Test Kit




Fill sample vial half full with sample water

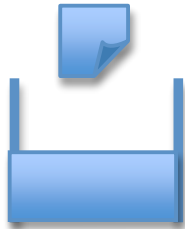

Open one foil packet and add powder contents to vial. Cap vial and shake rapidly for 5 seconds.



Dip a test strip into sample vial and rapidly move back and forth underwater for 15 seconds. Remove and shake excess water from test strip.

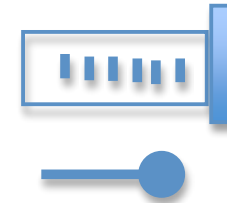

Immediately compare test pad to color chart and record results. Estimate results if color on test pad falls between two color blocks.

Rinse sample vial with tap water after each use.